



# Y6070 Still life table

## User's Manual

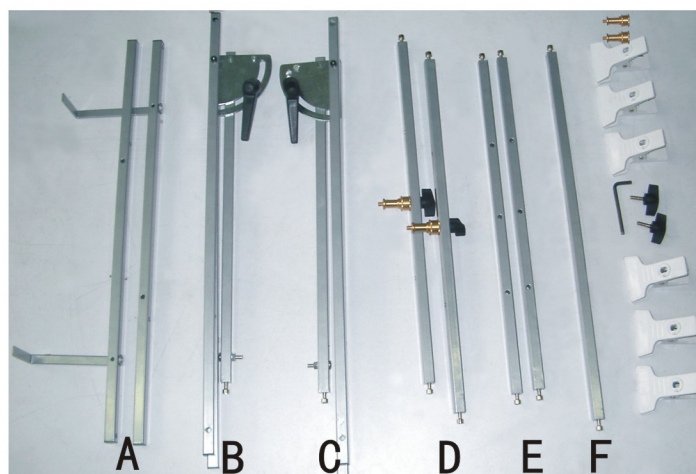

Y6070 schematic drawing

Installation schematic drawing:

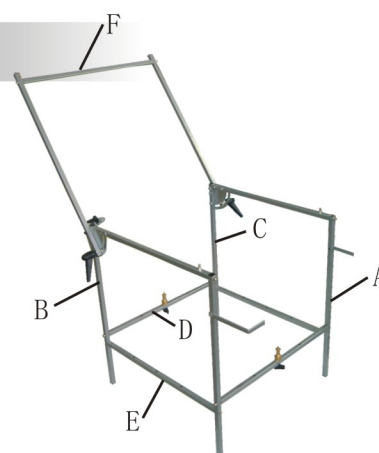

1. Open the package, take out all the fittings, place on a clean ground according to the schematic drawing.
2. According the above schematic drawing, install corresponding tube and lock tighten by hexangular spanner. (Note: When fix Tube B and tube C, it should take down combine spanner, and use cross screwdriver to take down the bolt. Turn 90 degree of short tube and fix the bolt tight again.)



3. Installs the PP board according to the chart, fix with the clamps, and install corresponding copper screw thread tie-in and S knob, it can use to fix the photographic photosource.
4. This still life table can put smooth, so it can take photo of bigger goods.